



C-stic Calibration

Step 1: Get into passcode screen

- The default passcode on the cstic is 221. To get to this screen, press the center button “E” until there are three 0’s showing. You may need to press twice.

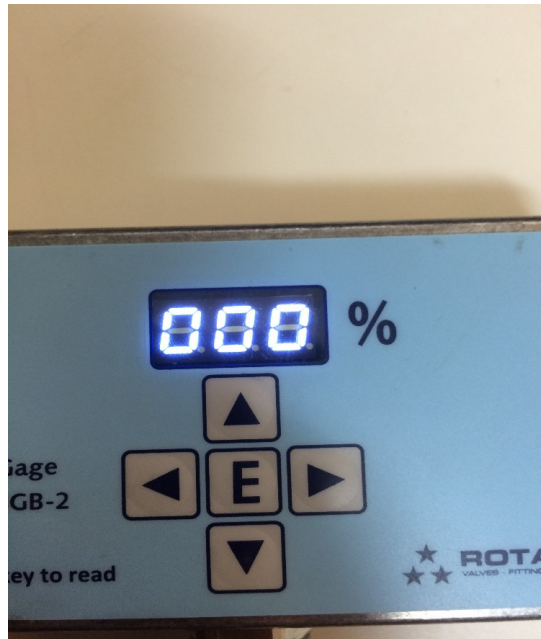

Step 2: Enter Passcode

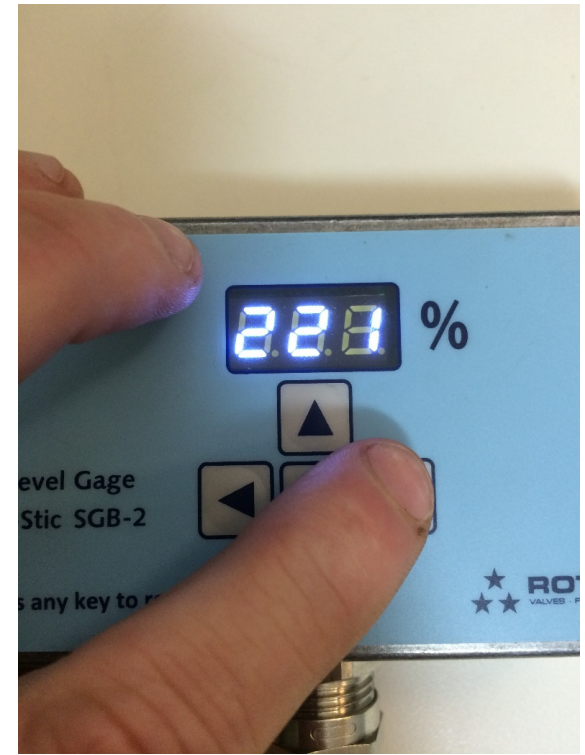

2a: Passcode Instructions

- Press the top arrow to change the value of the number set you are on. Press the right arrow to move to the next column to the right. Enter the code “221”. Press the “E” button when finished.

3. Calibrate Cstic

After you have entered the passcode, you should see “hi” flashing on the screen. If you are calibrating the high side of the tank (full), then go ahead and press the “E” button. You should see a reading of 100 after you press “E”. If you are calibrating the low side of the tank, press the down arrow until you see “low” flashing. Follow the same process above.

Note: NEVER CALIBRATE BOTH THE LOW AND THE HIGH SIDE AT THE SAME LEVEL. ALSO, ONLY CALIBRATE THE HIGH SIDE WHEN THE TANK IS FULL, AND ONLY CALIBRATE LOW WHEN THE TANK IS EMPTY!

